

Esc	F1 F2 F3 F4				F5 F6 F7 F8				F9 F10 F11 F12					
半角/全角	_1	_2	_3	_4	_5	_6	_7	_8	_9	_0	Minus	Caret	Yen	BS
Tab	Q	W	E	R	T	Y	U	I	O	P	Atmark	Open Bracket	Enter	
英数	A	S	D	F	G	H	J	K	L	Semi colon	Colon	Close Bracket	Enter	
LShift	Z	X	C	V	B	N	M	Comma	Period	Slash	Back Slash	RShift		
LCtrl	LWin	LAlt	無変換	Space				変換	ひらがな	RAlt	RWin	Apps	RCtrl	

Print Screen	Scroll	Pause
--------------	--------	-------

Insert	Home	Page Up
Del	End	Page Down

Num Lock	Num Slash	Num Asterisk	Num Minus
Num7	Num8	Num9	Num Plus
Num4	Num5	Num6	
Num1	Num2	Num3	Num Enter
Num0		Num Period	

Up	
Left	Down Right

日本語配列 109キーボード

Esc	F1 F2 F3 F4				F5 F6 F7 F8				F9 F10 F11 F12					
Back Quote	_1	_2	_3	_4	_5	_6	_7	_8	_9	_0	Minus	Equal	BS	
Tab	Q	W	E	R	T	Y	U	I	O	P	Open Bracket	Close Bracket	Back Slash	
CapsLock	A	S	D	F	G	H	J	K	L	Semi colon	Quote	Enter		
LShift	Z	X	C	V	B	N	M	Comma	Period	Slash	RShift			
LCtrl	LWin	LAlt	Space				RAlt	RWin	Apps	RCtrl				

Print Screen	Scroll	Pause
--------------	--------	-------

Insert	Home	Page Up
Del	End	Page Down

Num Lock	Num Slash	Num Asterisk	Num Minus
Num7	Num8	Num9	Num Plus
Num4	Num5	Num6	
Num1	Num2	Num3	Num Enter
Num0		Num Period	

Up	
Left	Down Right

英語配列 104キーボード